 




The values on this document are suggested initial settings when starting up your boiler. They may need to be adjusted based upon your specific situation. In general, the values listed in the SERVICE MENU portion of this should not be adjusted after initial setup.



Turn on the Power Switch

Run display is shown. If power was lost, time and date are flashing. Press the book button and set the date and time.

 If display shows Err: xx and beeping then press <Enter> to acknowledge (silence) the beeper. The red warning LED will illuminate on the display. Look for the Err :xx in the manual to figure out what is wrong.

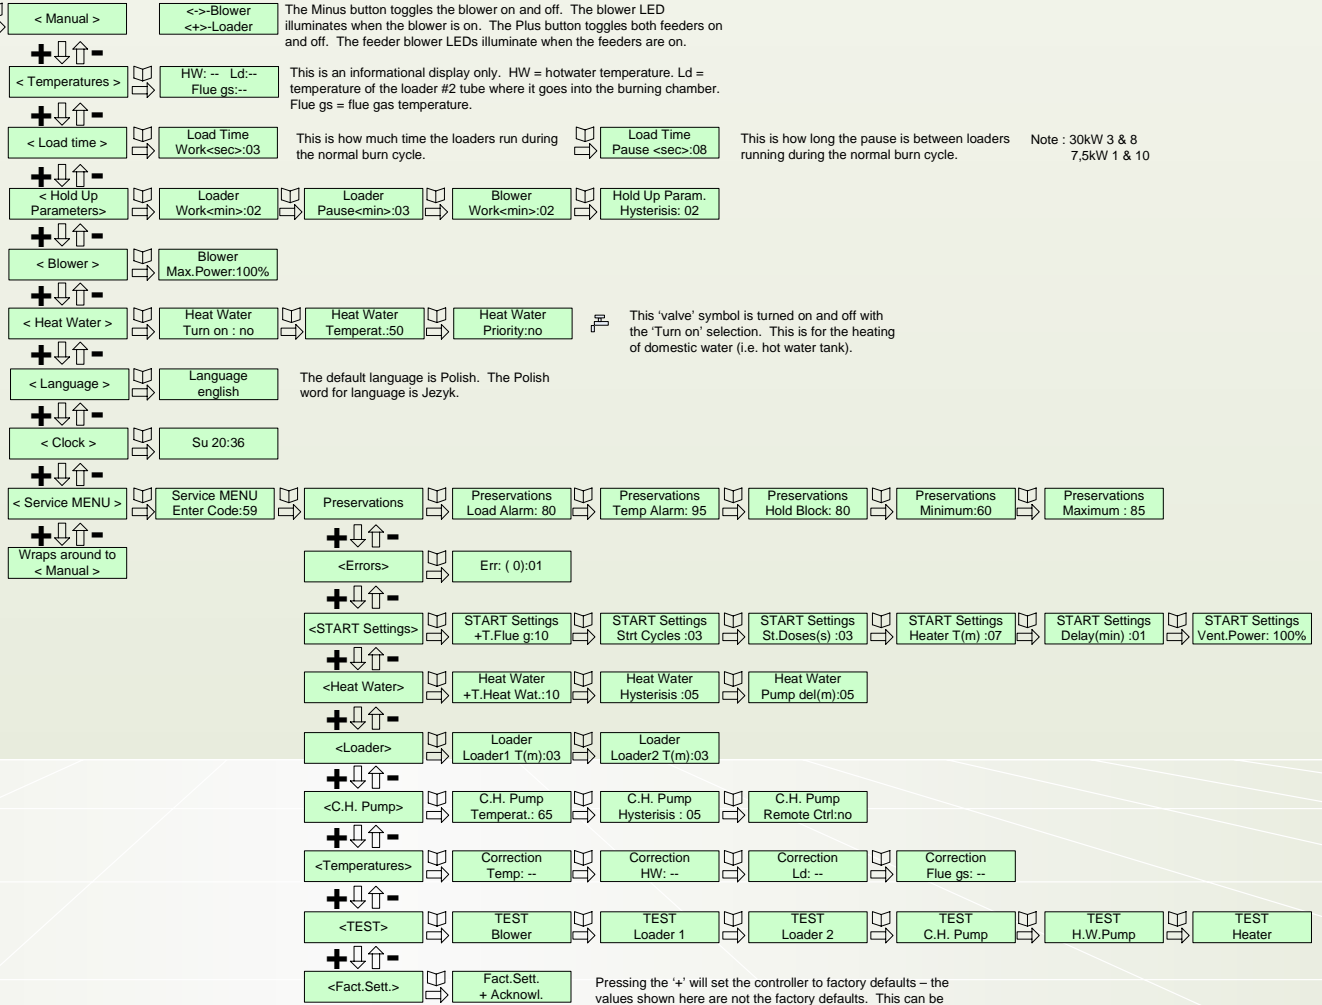

This is the 'book' button. It is used to move to the 'right' in the menus.

This is the 'Enter' button. It is used to acknowledge alarms. It also returns you to a main menu item (i.e. <Manual>) and then to the Run screen.

This is the 'plus' button. It is used to move 'downwards' in the menus. It is used to increment values. It is used to toggle specified functions.

This is the 'minus' button. It is used to move 'upwards' in the menus. It is used to decrement values. It is used to toggle specified functions.

REV	DATE	DESCRIPTION	BY
1	7/25/08	Revised suggested initial settings.	GR

New Horizon Corporation
151 McGregor Drive
Sutton, West Virginia 26601
newhorizoncorp.com

DATE: 07/25/08
DRN BY: WGR
CHK'D BY: -
APPRVD BY: -
DWG. NO.: -

Orlan Pellet Boiler
Menu Flowsheet
PAGE of