





The Specialist in Mobility Lifts Trusted for over 50 years

Buy direct from the British manufacturer

www.terrylifts.co.uk/harmony Call 01565 752 800 for free and impartial advice





Independent Living Made Easy

Regain the freedom of your home with the Harmony Homelift.

The lift will provide you with safe and easy access to your upstairs, meaning you can regain the whole living space without needing to move to a bungalow or ground floor flat.

Whether travelling seated in a wheelchair or on the optional fold-down seat, the Harmony Homelift will allow you to move between floors safely, smoothly and quietly. The lift features an exceptionally wide range of cabin sizes to choose from, so you are sure to find a model that fits your needs. The design of the lift maximises the space in the cabin so you can travel in comfort.

The Harmony Homelift can be fitted almost anywhere in your home. It requires only minimal headroom on the first floor and it can be installed against non-load bearing walls.

We will take care of everything

Purchasing and having your Harmony Homelift installed is far less complicated than you might think.

We will survey your home and provide you with a written quotation. After your decision to proceed, we will do all the necessary preparation work. The installation itself takes less than two days.

Product Highlights

- Quiet Glide Hydraulic system for smooth travel
- Volift shaft required minimises the space required for the lift
- Powered door as standard making wheelchair access easier
- Market leading range of cabin sizes to suit your every need
- Smart compact design minimises the lift footprint and maximises cabin floor space
- Safety glass vision panels which will not scratch or discolour
- One-touch controls no need for constant pressure to controls, unlike some other lifts on the market
- Wireless landing controls making it easy to decide on wall control location
- Low cabin floor profile makes for easy wheelchair access
- Fire and smoke protection as standard making the lift totally safe when serving room to room
- Quick, no mess, no fuss installation
- Designed and manufactured in Britain

Peace of Mind

The safety of you and your family is our priority. This is why the Harmony Homelift is equipped with all the essential safety features as standard.

Pressure sensitive safety surfaces stop the lift if it gets obstructed from above or below. The lift also features a battery back-up system, allowing you to return to the ground floor

- 12 months parts and labour warranty, as standard
- Options for extended warranty
- Service visit included for every year under warranty
- All Lifts are Lifetime tested to ensure reliability

safely in the event of a power failure without the need for laborious hand-winding.

Fire safety is an important consideration. The Harmony Homelift maintains fire and smoke protection between the floors, whether it is parked upstairs or downstairs. Smoke or heat alarms ensure the lift performs correctly in case of activation.

Members of LEIA (Lift and Escalator Industry Association) – means that we operate under a particular code of conduct which requires us to have all relevant technical and quality certification as well as guaranteeing the supply of spare parts for years to come

The Terry Lifts Promise



Safety built in:

- Pressure sensitive surfaces and safe edges
- Emergency lowering in case of power cuts and easy to use manual lowering
 - 30-minute fire and smoke integrity maintained between floors
 - Smoke or heat alarms provided on both floors

Ensuring we comply:

- Compliant with the Machinery Directive
- Independently certificated by a Notified Body as is our legal requirement
- Compliant with British Standards BS 5900:2012. Dedicated permanent electrical supply, as required by BS 5900
 - The Harmony Homelift fully complies with the Chartered Institute of Building Services Engineers (CIBSE) Guide D recommendations

Your Harmony Homelift in Use



Easy-to-use wireless controls come as standard in the cabin and at both floors.



A simple push of the button sends the lift up. The controls can be positioned to suit your needs.



The aperture ceiling panel is automatically lifted or replaced en-route.



The lift moves to the other floor and vacates the space it was in. The guides are set back against the wall and do not impact on the room.



Low cabin floor construction ensures easy wheelchair access and egress.



The lift can be sent back to the floor below, leaving a feeling of space in the room.

Your Harmony Homelift

Standard features

Safe edges also stop the lift from moving if

Toughened safety glass windows

Wireless wall controls

Modern LED lighting illuminates

the cabin and the room

(optional extra)

obstructed

Pressure-sensitive safety surface stops the lift when obstructed. The infill provides a minimum of 30-minute fire protection and seals the room from smoke

Lifting mechanism is concealed in the guide, resulting in a neat and tidy appearance when the cabin is at the upper level.

Modern LED down lighting illuminates both sides of the cabin

Wireless cabin controls can be mounted according to user preference

> Powered door is available on the wheelchair models


Left or right door handing

Pressure-sensitive safety surface, doubling as ceiling closure and fire/smoke seal

Optional extras

- A range of trim and carpet colours
- Special colours and vinyl wraps
- Folding seat (can be used as a perch seat)
- Telephone in the cabin
- Hand held remote control
- 🗸 Grab handles
- Joystick control
- Cabin padding on three sides and door
- Mirror
- Extended warranty
- 🗸 Perch seat
- 🗸 Fob
- ✓ Cabin side lighting

Cabin Dimensions

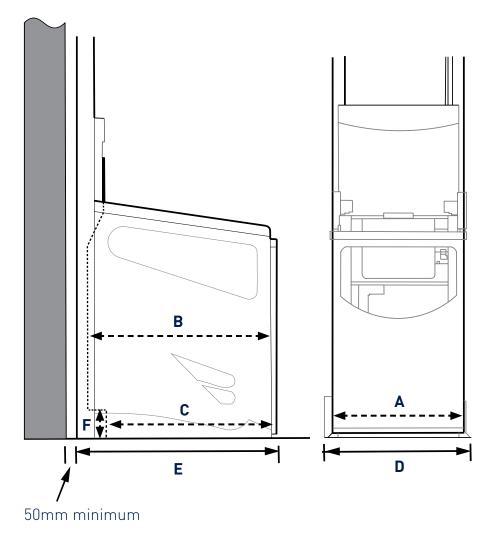

Harmony Homelift travel: Minimum 2060mm, Maximum 3600mm

This information is for guidance only and must not be used for project design. Technical information is available to assist you and our surveyors are on-hand to advise. Terry Lifts' policy is one of continuous product development and the company reserves the right to change specifications without notice.

Lift Model All dimensions in mm	A Internal width	B Internal length above axle cover	C Internal length to axle cover	D External width	E External length	F Axle cover height	Capacity
Harmony S (Std wheelchair)	755	1185	1026	920	1265	90	280 kg
Harmony W (Wider)	890	1185	1026	1055	1265	90	280 kg
Harmony L (Longer)	755	1385	1226	920	1465	90	250 kg
Harmony LW (Longer Wider)	890	1385	1226	1055	1465	90	250 kg

For further information or to book your no obligation consultation, call us today on **01565 752 800** or visit **www.terrylifts.co.uk** to view our full range of homelifts



Lifestyle Homelift Harmo



Harmony Fully Enclosed Homelift



Terry Group Ltd. Unit 1-3, Longridge Trading Estate Knutsford, Cheshire WA16 8PR

Tel: +44 (0)1565 752 800 www.terrylifts.co.uk enquiries@terrylifts.co.uk